

3.4

3.4

- 2 imx img imx IVT TF 1024 img 1024 0 IVT w
- USB imx
- USB EMMC TF “ ”
- a. USB u-boot

b. USB

c. USB u-boot

d. u-boot EMMC TF
- IMX6ULL uuu Universal Update Utility mfgtools 3.0

<https://github.com/NXPmicro/mfgtools>

<https://github.com/NXPmicro/mfgtools/releases>

3.4.1 USB

- USB
- ① USB USB

100ASK_IMX6ULL



image not found or type unknown

② USB OTG

100ASK_IMX6ULL



image not found or type unknown

③ uuu IMX

tools uuu.exe(windows) uuu(Linux)

Windows

a.



image not found or type unknown

b.

tools\uuu.exe led.imx



image not found or type unknown

a. USB

b. TF

c. uuu


d. imx bin img

3.4.2 TF

TF


a. TF

TF win32diskimager img SD

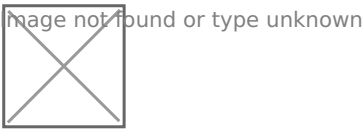

b.

TF SD/TF ()

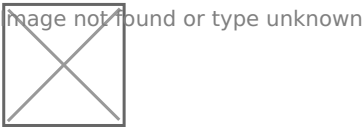


win32diskimager img imx

3.4.3 USB EMMC

USB u-boot 2 u-boot-dtb.imx led.imx u-boot u-boot


① USB USB

100ASK_IMX6ULL

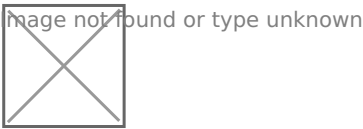

② USB OTG

100ASK_IMX6ULL

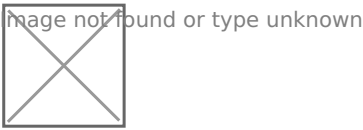


③ uuu IMX

tools uuu.exe(windows) uuu(Linux)

Windows

a.

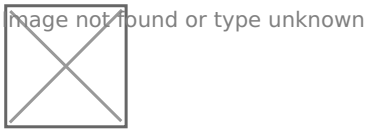


b.

tools\uuu.exe -b emmc tools\u-boot-dtb.imx led.imx

“-b emmc” emmc tools\u-boot-dtb.imx led.imx

EMMC

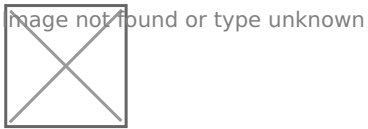

a. USB

b. TF

c. uuu

d. EMMC

Revision #1

Created 3 March 2022 02:58:29 by

Updated 3 March 2022 02:58:51 by