

# Linux -

- Linux

- Test

-

# Linux

## Linux

### 1.1.1 Linux

Linux              PC

u-boot              APP

2 3        u-boot    2 3        u-boot        u-boot

# Test

Test

QT	qt4.8	Qtopia ,	Qt	5.7	qt5.6 for wind
JZ2440	ubuntu9.10	Qt5.6 ,	qt	ubuntu14.04	
4.3.2				4.4.3	
	4				
1					
2					
3	tslib				
4	qt				

1  
arm-Linux-gcc-4.4.3.tar.gz . http://pan.baidu.com/s/1nvJF8ud oi57  
2 JZ2440  
linux-2.6.22.6.tar.bz2 . http://pan.baidu.com/s/1gf0oZn1 jrp6  
linux-2.6.22.6\_jz2440.patch http://pan.baidu.com/s/1c1CWgTE uwuu  
4.3 LCD\_mach-smdk2440.c http://pan.baidu.com/s/1boZsKwf 1xml  
3 busybox  
busybox-1.22.1.tar.bz2 . http://pan.baidu.com/s/1cee6Cl . lv81  
4 tslib  
tslib-1.4.tar.gz  
5 qt5.6 http://pan.baidu.com/s/1jINj3lQ 6kkc  
qt-everywhere-opensource-src-5.6.0.tar.gz http://pan.baidu.com/s/1kVnV9oN r7cm

/work

1  
sudo tar zxvf arm-linux-gcc-4.4.3.tar.gz -C / #  
ls /opt/FriendlyARM/toolschain/4.4.3/bin #  
2  
sudo vi /etc/environment

1. #PATH="/usr/local/sbin:/usr/local/bin:/usr/sbin:/usr/bin:/sbin:/bin:/usr/games:/work/tools/gcc-3.4.5-glibc-2.3.6/bin"//

2. PATH="/usr/local/sbin:/usr/local/bin:/usr/sbin:/usr/bin:/sbin:/bin:/usr/games:/opt/FriendlyARM/toolschain/4.4.3/bin"//

          usr        root       environment            root    make install

3

4

arm-linux-gcc -v

4.4.3

jz2440  EABI                                 jz2440

1

tar jxvf linux-2.6.22.6.tar.bz2

2

cd linux-2.6.22.6

patch -p1 < ../linux-2.6.22.6\_jz2440.patch

  4.3  JZ2440  LCD  3.5

mv ./4.3 LCD\_mach-smdk2440.c arch/arm/mach-s3c2440/mach-smdk2440.c

3      EABI

make menuconfig

kernel features->

  <\*>use the arm eabi to .... //

4      makefile      4.4.3

vi Makefile

  2.6.32.2  kernel too old

Makefile

VERSION = 2

PATCHLEVEL = 6

SUBLEVEL = 22

EXTRAVERSION = .6

  SUBLEVEL = 22  SUBLEVEL = 32

//              4.4.3             gdwarf2

  ifdef CONFIG\_DEBUG\_INFO

  CFLAGS += -g

```
AFLAGS += -gdwarf2
endif
// AFLAGS += -gdwarf2
5
make ulimage -j4
    ulimage /arch/arm/boot

1
tar jxvf busybox-1.22.1.tar.bz2
2
make menuconfig
Busybox Settings ->
general configuration ->
[*] don't use /usr      //
build options->
cross compiler prefix = arm-linux-      //
installtion options->
busybox installation prefix = /work/my_rootfs //
3  &
mkdir -p /work/my_rootfs      //
make
make install
cd /work/my_rootfs
ls      //
        /work/my_roofs
4  /etc/inittab
mkdir -p /work/my_rootfs/etc
vi /work/my_rootfs/etc/inittab
# /etc/inittab
#      /etc/init.d/rcS
::sysinit:/etc/init.d/rcS
#      shell
::askfirst:-/bin/sh
#
::ctrlaltdel:/sbin/reboot
::shutdown:/bin/umount -a -r
5  /etc/init.d/rcS
mkdir -p /work/my_rootfs/etc/init.d
vi /work/my_rootfs/etc/init.d/rcS
#      /bin/sh
#!/bin/sh
#
mount -a
```

```

#
mkdir /dev/pts
mount -t devpts devpts /dev/pts
echo /sbin/mdev > /proc/sys/kernel/hotplug
mdev -s
# IP
#/sbin/ifconfig eth0 192.168.1.17 #nfs
# /etc/fstab
mount -a
exec /etc/rc.local
6 rc.local
vi /work/my_rootfs/etc/rc.local
#!/bin/sh
. /etc/profile // .
7 /etc/fstab
vi /work/my_rootfs/etc/fstab
# device mount-point type options dump fsck order
proc /proc proc defaults 0 0
sysfs /sys sysfs defaults 0 0
tmpfs /tmp tmpfs defaults 0 0
tmpfs /dev tmpfs defaults 0 0
8 /dev
mkdir -p /work/my_rootfs/dev
cd /work/my_rootfs/dev
sudo mknod console c 5 1
sudo mknod null c 1 3
9
mkdir proc mnt tmp sys root usr
10 Lib
cd /opt/FriendlyARM/toolschain/4.4.3/arm-none-linux-gnueabi/lib
cp *.so* /work/my_rootfs/lib -d
cd /opt/FriendlyARM/toolschain/4.4.3/lib
cp *.so* /work/my_rootfs/lib -d

```

## **tslib**

```

1 & &
autoconf automake libtool
#sudo apt-get install autoconf automake libtool
tar zxvf tslib-1.4.tar.gz
sudo mkdir -p /usr/local/tslib
cd tslib
./autogen.sh
./configure --host=arm-linux ac_cv_func_malloc_0_nonnull=yes CC=arm-none-linux-gnueabi-gcc
CXX=arm-none-linux-gnueabi-g++ -prefix=/usr/local/tslib

```

```

make
sudo make install

        undefined reference to 'rpl_malloc'          config.h.in      #undef malloc    n
tslib      /usr/local/tslib

2  tslib
cd /usr/local/tslib/etc/
sudo vi ts.conf
# module_raw input      "#"
3  tslib
cd /usr/local
sudo tar zcvf tslib.tar.gz tslib
mkdir -p /work/my_rootfs/usr/local
cp tslib.tar.gz /work/my_rootfs/usr/local
tar zxvf tslib.tar.gz
rm tslib.tar.gz
4  tslib
vi /work/my_rootfs/etc/profile

#!/bin/sh
export T_ROOT=/usr/local/tslib
export LD_LIBRARY_PATH=/usr/local/tslib/lib:$LD_LIBRARY_PATH
export TSLIB_CONSOLEDEVICE=none
export TSLIB_FBDEVICE=/dev/fb0
export TSLIB_TSDEVICE=/dev/input/event0
export TSLIB_PLUGINDIR=$T_ROOT/lib/ts
export TSLIB_CONFFILE=$T_ROOT/etc/ts.conf
export POINTERCAL_FILE=/etc/pointercal
export TSLIB_CALIBFILE=/etc/pointercal
tslib      nfs      cd /usr/local/tslib/bin

./ts_test
"selected device is not a touchscreen I understand"
0x0100000

```

## qt5.6

```

1
tar zxvf qt-everywhere-opensource-src-5.6.0.tar
2
cd /work/qt-everywhere-opensource-src-5.6.0/qtbase/mkspecs/linux-arm-gnueabi-g++
vi qmake.conf
2440
QT_QPA_DEFAULT_PLATFORM = linuxfb

```

```

QMAKE_CFLAGS += -msoft-float -D__GCC_FLOAT_NOT_NEEDED -march=armv4t -mtune=arm920t
QMAKE_CXXFLAGS += -msoft-float -D__GCC_FLOAT_NOT_NEEDED -march=armv4t -
mtune=arm920t

march    cpu    2440      armv4t
mtune    cpu        2440      arm920t
A8

QT_QPA_DEFAULT_PLATFORM = linuxfb
QMAKE_CFLAGS += -msoft-float -D__GCC_FLOAT_NOT_NEEDED -march=armv7-a -mtune=cortex-
a8
QMAKE_CXXFLAGS += -msoft-float -D__GCC_FLOAT_NOT_NEEDED -march=armv7-a -
mtune=cortex-a8
A9

QT_QPA_DEFAULT_PLATFORM = linuxfb
QMAKE_CFLAGS += -msoft-float -D__GCC_FLOAT_NOT_NEEDED -march=armv7-a -mtune=cortex-
a9
QMAKE_CXXFLAGS += -msoft-float -D__GCC_FLOAT_NOT_NEEDED -march=armv7-a -
mtune=cortex-a9

# modifications to g++.conf
QMAKE_CC = arm-linux-gnueabi-gcc
QMAKE_CXX = arm-linux-gnueabi-g++
QMAKE_LINK = arm-linux-gnueabi-g++
QMAKE_LINK_SHLIB = arm-linux-gnueabi-g++

# modifications to linux.conf
QMAKE_AR = arm-linux-gnueabi-ar cqs
QMAKE_OBJCOPY = arm-linux-gnueabi-objcopy
QMAKE_NM = arm-linux-gnueabi-nm -P
QMAKE_STRIP = arm-linux-gnueabi-strip
-lts      tslib

# modifications to g++.conf
QMAKE_CC = arm-none-linux-gnueabi-gcc -lts
QMAKE_CXX = arm-none-linux-gnueabi-g++ -lts
QMAKE_LINK = arm-none-linux-gnueabi-g++ -lts
QMAKE_LINK_SHLIB = arm-none-linux-gnueabi-g++ -lts

# modifications to linux.conf
QMAKE_AR = arm-none-linux-gnueabi-ar cqs
QMAKE_OBJCOPY = arm-none-linux-gnueabi-objcopy
QMAKE_NM = arm-none-linux-gnueabi-nm -P
QMAKE_STRIP = arm-none-linux-gnueabi-strip
3
sudo mkdir -p /usr/local/Qt5.6
cd ../../..

```

```
./configure -prefix /usr/local/Qt5.6 \
-opensource \
-release \
-confirm-license \
-xplatform linux-arm-gnueabi-g++ \
-shared \
-qt-zlib \
-no-gif \
-qt-libjpeg \
-no-nis \
-no-opengl \
-no-cups \
-no-glib \
-no-dbus \
-no-rpath \
-no-sse2 -no-sse3 -no-ssse3 -no-sse4.1 -no-sse4.2 \
-no-avx \
-no-openssl \
-nomake tools \
-qreal float \
-qt-libpng \
-tslib \
-nomake examples \
-I /usr/local/tslib/include \
-L /usr/local/tslib/lib
```

```
make -j4
sudo make install
```

```
libxcb      qtbase/src/plugins/platforms/xcb    readme
4      qt
cd /usr/local
sudo tar zcvf Qt5.6.tar.gz Qt5.6
cp Qt5.6.tar.gz /work/my_rootfs/usr/local/
tar zxvf Qt5.6.tar.gz
rm Qt5.6.tar.gz
rm -r doc include bin mkspecs qml translations
5  qt
      qt      http://doc.qt.io/qt-5/embedded-linux.html

      /etc/profile
export QTDIR=/usr/local/Qt5.6
export LD_LIBRARY_PATH=/usr/local/Qt5.6/lib:$LD_LIBRARY_PATH
export QT_QPA_GENERIC_PLUGINS=tslib
export QT_QPA_FONTDIR=$QTDIR/lib/fonts
```

```
export QT_QPA_PLATFORM_PLUGIN_PATH=$QTDIR/plugins  
export  
QT_QPA_PLATFORM=linuxfb:fb=/dev/fb0:size=480x272:mmSize=480x272:offset=0x0:tty=/dev/tty  
1
```

```
export QT_QPA_FB_TSLIB=1
```

```
3.5 320*240 LCD JZ2440 V3
```

qt nfs .NET <http://www.cnblogs.com/52580215dnqt/>

## Qt

```
windows qt windows qt QQ
```

```
windows
```

```
/usr/local/Qt5.6/bin/qmake
```

```
make
```

```
qmake
```

```
QIconvCodec::convertFromUnicode: using Latin-1 for conversion, iconv_open failed  
QIconvCodec::convertToUnicode: using Latin-1 for conversion, iconv_open failed
```

```
libiconv
```

```
http://pan.baidu.com/s/1c22xb4O pbld
```

```
mkdir -p /usr/local/libiconv
```

```
./configure --host=arm-none-linux-gnueabi --prefix=/usr/local/libiconv CC=arm-none-linux-gnueabi-gcc LDFLAGS="-L/opt/FriendlyARM/toolschain/4.4.3/arm-none-linux-gnueabi/sys-root/lib" --enable-static
```

```
make
```

```
sudo make install
```

```
/lib/preloadable_libiconv.so /lib /etc/profile  
export LD_PRELOAD=/lib/preloadable_libiconv.so
```

## 7 Qt

```
qt  
http://pan.baidu.com/s/1bp9QFQv 2u81  
DroidSansFallback.ttf      /usr/local/Qt5.6/lib/fonts      Qt  
qt creator  qt  
QT += gui  
  
#include <QFontDatabase>  
  
int id = QFontDatabase::addApplicationFont("/usr/local/Qt5.6/lib/fonts/DroidSansFallback.ttf");  
QString msyh = QFontDatabase::applicationFontFamilies (id).at(0);  
QFont font(msyh,10);  
font.setPointSize(20);  
this->setFont(font);
```

## 8 &

```
8.1 qt      Ui      320*240  
http://pan.baidu.com/s/1qXV4C1Y 908q  
8.2 jz2440    3.5 4.3  
http://pan.baidu.com/s/1qYMrxmc qsk0  
8.3  
http://pan.baidu.com/s/1skLtj3J lbo2  
nfs      dev      console null  
/etc/profile          3.5  
80 M     yaffs     100 M qt      app
```

ssh

<http://blog.csdn.Net/lizuobin2/article/details/52664339>

rz

<http://blog.csdn.net/lizuobin2/article/details/52601617>

<http://blog.csdn.net/lizuobin2/article/details/52664657>